
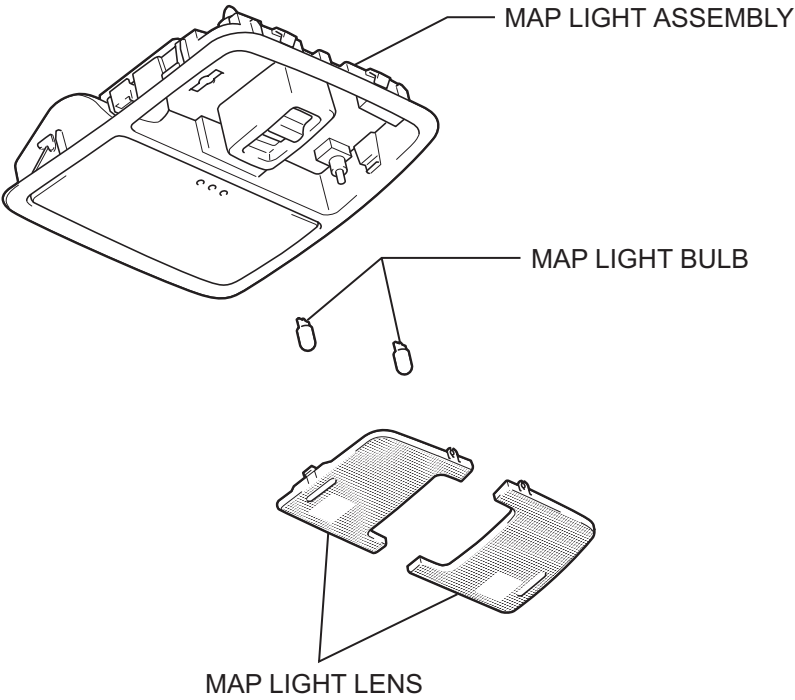


# MAP LIGHT ASSEMBLY

## COMPONENTS

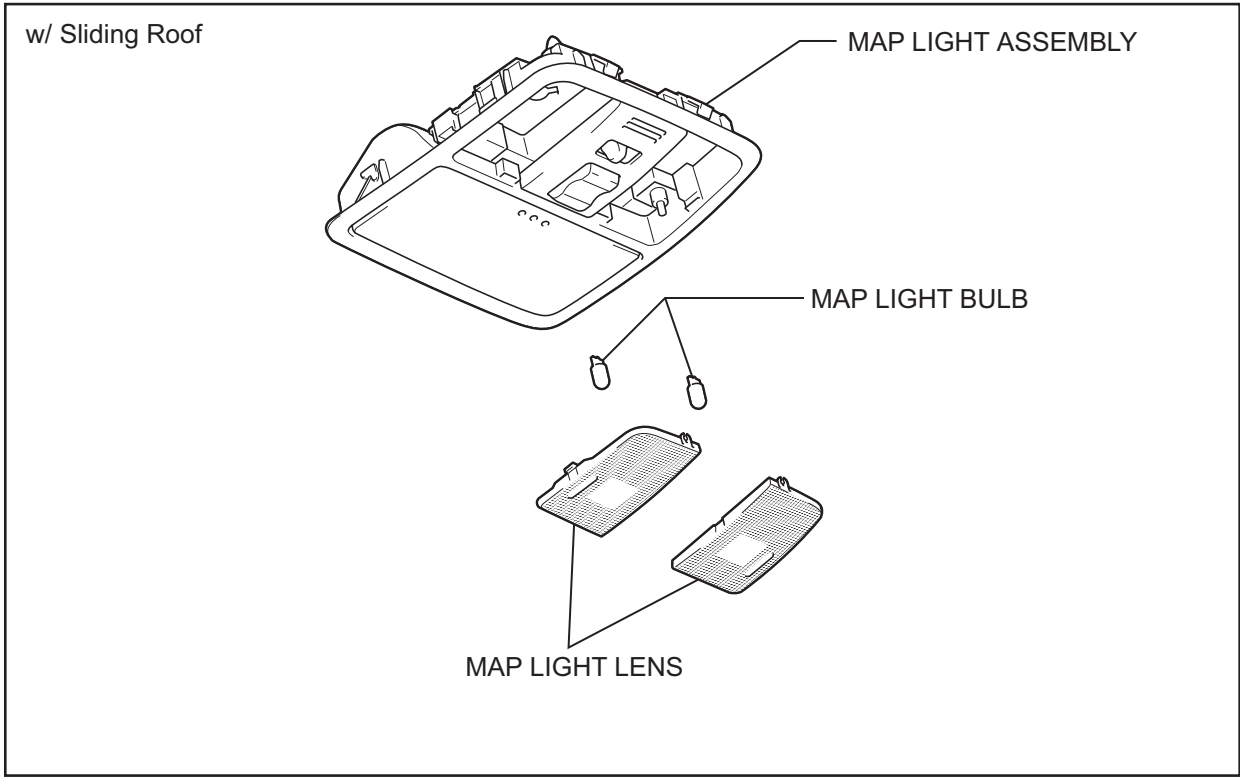

## REMOVAL



1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**

### CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. **REMOVE MAP LIGHT ASSEMBLY**

- (a) Detach the 4 clips and remove the map light.
- (b) Disconnect the light connector.

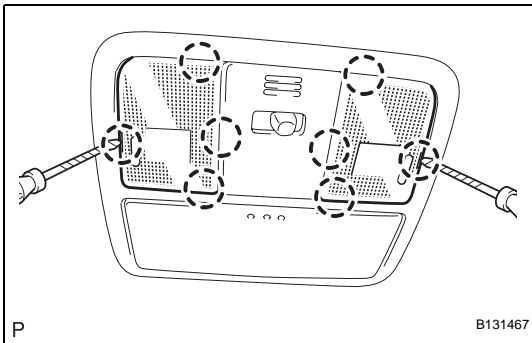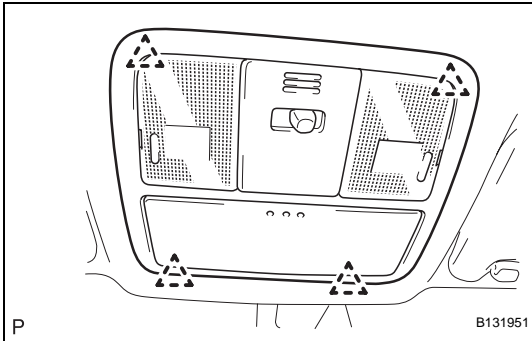


3. **REMOVE MAP LIGHT LENS**

- (a) Using a screwdriver, pry out the 8 claws and remove the map light lens.

### HINT:


Tape the screwdriver tip before use.

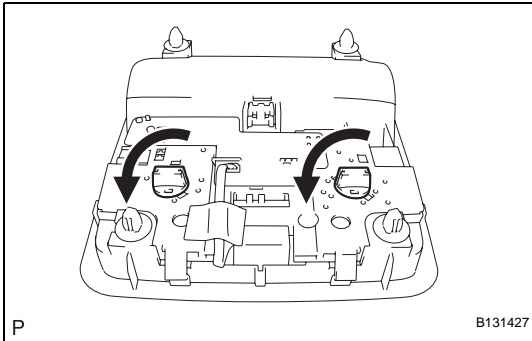

## DISASSEMBLY

1. **REMOVE MAP LIGHT BULB**

- (a) Remove the 2 bulbs from the light.

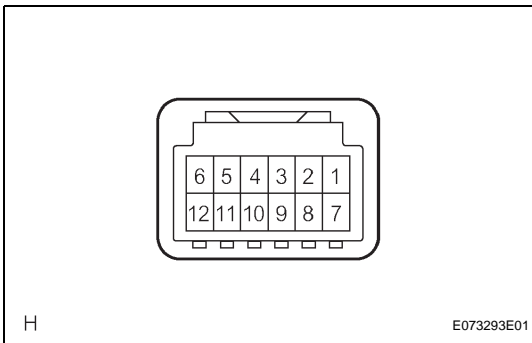

## INSPECTION

1. **INSPECT MAP LIGHT ASSEMBLY**

- (a) Connect the battery's positive (+) lead to terminal 6 and the negative (-) lead to terminal 1, and then check that the light comes on when the switch is in the DOOR position.

### OK:

**Light comes on.**

If the result is not as specified, replace the light assembly.

- (b) Connect the battery's positive (+) lead to terminal 6 and the negative (-) lead to terminal 7, and then check that the light comes on when the switch is in the ON position.

**OK:**


**Light comes on.**

If the result is not as specified, replace the light assembly.

## REASSEMBLY

### 1. INSTALL MAP LIGHT BULB


- (a) Install the 2 bulbs to the light.

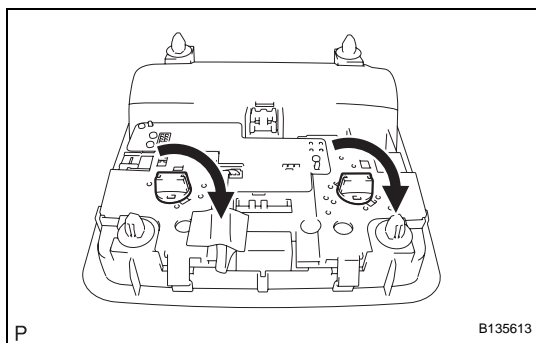

## INSTALLATION

### 1. INSTALL MAP LIGHT LENS

- (a) Attach the 8 claws to install the map light lens.

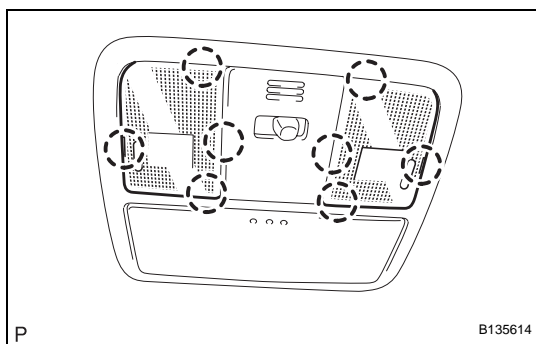

### 2. INSTALL MAP LIGHT ASSEMBLY

- (a) Connect the light connector.  
(b) Attach the 4 clips to install the map light.

### 3. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

